

# **HOGTUNES**

*Audio Solutions For The Great American Cruiser*



**Designed and Engineered in North America**

## **FLTR SIDE PLATE-RM**

### **Installation Manual**

**The Mounting Plate In This Kit Installs A  
Hogtunes REV 225-RM or Wild Boar Audio  
WBA 300.2 Over The Brake Side Speaker  
Cabinet Inside The Fairing Of  
2015+ Road Glide Models**

**Note: This Manual Shows The Mounting Of The Plate/Amp  
Assembly into The Bike. Please Refer To The Amplifiers  
Manual For Wiring Instructions**

*Rev 1.0*

It can very helpful to read the entire manual before starting! If you have any questions or concerns, we are here to help. Please email us at [tech@hogtunes.com](mailto:tech@hogtunes.com) or call us during regular business hours (EST) at 705-719-6361. If you still need help, then please consider a professional installation by your dealer.


## FLTR Side Plate-RM Installation Instructions:

**Step #1:** Make sure your ignition switch stays in the “OFF” position. Remove your speaker grills, outer fairing/headlamp assembly and set aside. Refer to a service manual if you need help with this. **NOTE:** Placing a towel on the front fender can help prevent scratches or “dings” from dropped tools or fasteners, etc. Hi volume, colorful expletives will also be kept to a minimum.


**Step #2:** Looking at Fig 1.2 below for reference, you will see a factory wire connector with pink/pink black wires that needs to be separated.

**Step #3:** See Fig 1.1 and Fig 1.2 below. There are 5 factory “allen key” fasteners highlighted by arrows that need to be removed to allow the speaker cabinet to come off the bike. Its a good idea to remove the 3 fasteners shown in Fig 1.1 first. **Note:** As you are pulling the speaker cabinet away from the bike, you will see a “Christmas Tree” fastener that secures a factory cable to the speaker cabinet. This needs to be undone so the cabinet can come away from the bike.


**Step #4:** Put the speaker cabinet and factory fasteners aside for now. Its time to attach the FLTR Side Plate-RM to your amplifier. For this manual, we are showing the Wild Boar Audio WBA 300.2 amplifier, however the Hogtunes REV 225-RM amplifier will mount virtually the same way.

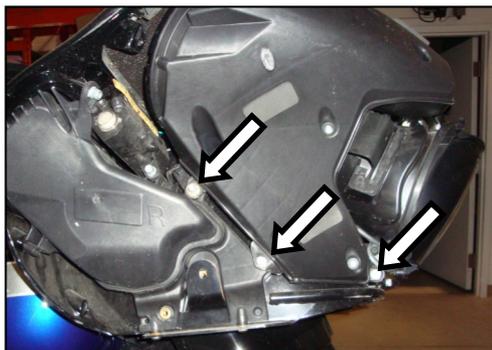


**Fig 1.1 Side View Of Speaker Cabinet**

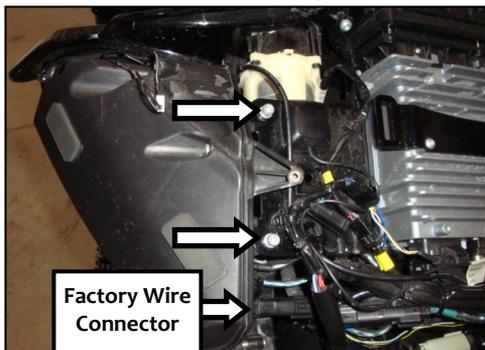

**Fig 1.2 Top View Of Speaker Cabinet**

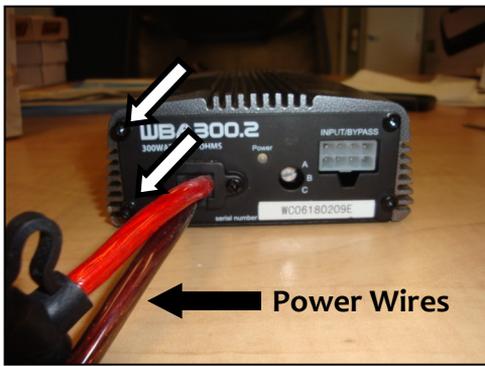


**Step #5:** For this installation, we will refer to the power “end” of the amp as the front. Remove the 2 small allen head fasteners highlighted by the white arrows. Also remove the 2 screws on the back end of the amp, directly opposite the first 2 screws just removed.

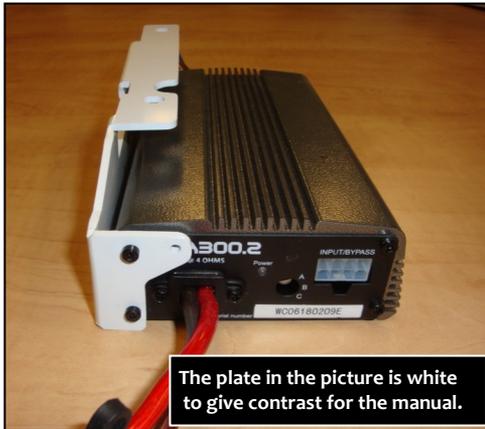

**Step #6:** Slip the mounting plate over the amp as shown and reinstall the 2 screws into the front, and 2 screws into the back of the amp.

**Note:** The extra hole on the front and back of the plate are used if you are mounting a Hogtunes REV 225-RM amp in the bike.

The speaker wires coming out of the factory cabinet end in a connector that is secured to the cabinet with a “Christmas Tree” fastener. Carefully pry up on this connector to allow it to hang free. The amplifier will not fit with that connector secured to the cabinet!

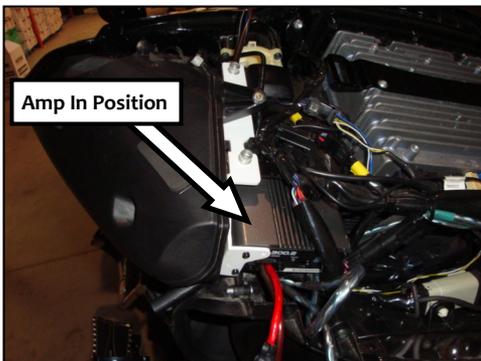

**Step #7:** The holes on the top of the plate mate with the screw holes on the top of the speaker cabinet (bolt holes in Fig 1.2) Holding the amp in position, slide the cabinet/amp into position noting that the amp plate sits over TOP of the factory metal plate. When correctly in place, the factory screws will go

through the amp plate, through the factory steel plate, and into the speaker cabinets. We strongly suggest getting all 5 factory fasteners “started” before tightening into place. With the cabinet secured, re-connect the cabinets speaker wire to the bike and you are done!

**PRACTICE  
SAFE  
SOUND!**

*Any audio system can be a distraction to the rider and/or passenger. Please use caution when playing your stereo, especially in traffic.*

**PowerSports**  
 **AUDIO** INC.