




Any audio system can be a distraction to the rider and/or passenger. Please use caution when playing your stereo, especially in traffic.

www.hogtunes.com

HOGTUNES

Audio Solutions For The Great American Cruiser

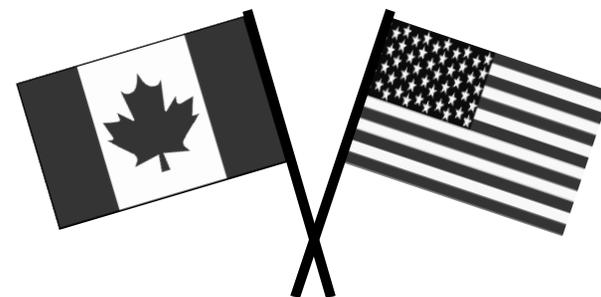

Designed and Engineered in North America

RGRM2CH

Installation Manual

***This Kit Allows For The Installation
Of Hogtunes REV 200-RM Amp Into
Rushmore Road Glides Models***

Not For Use On CVO Models With Factory Amplifiers Installed

Rev 1.1

Congratulations and Thank-you for your purchase of Hogtunes RGRM2CH kit made to install Hogtunes REV 200-RM amp into inside fairings of Rushmore model Road Glides! If you have any questions or concerns, we are here to help. Email info@hogtunes.com or call us during regular business hours (EST) at 705-719-6361. If you still need help, then please consider a professional installation by your dealer.

NOTE: This manual covers how to attach the REV 200-RM amplifier to the RGRM2CH plate, and how to affix the amp/plate to the bike. Please refer to the REV 200-RM manual for wiring instructions

Getting Started:

Step #1: Remove your outer fairing and headlamp assembly and set aside. Refer to a service manual if you need help with this. **NOTE:** Placing a towel on the front fender can help prevent scratches or “dings” from dropped tools or fasteners, etc. Colorful expletives will also be kept to a minimum!

Step#2: REV 200-RM amp comes mounted to a silver mounting plate. Undo the 4 screws that attach the amp to the plate, separate the plate from the amp, and put the silver plate aside.

Step#3: Using the “hook and loop” adhesive that come in the kit, affix the amp to the plate making sure the amp is oriented to the RGRM2CH plate as in Fig 1.1 (below). Use the mounting holes on the amp to line up with the holes on the mounting plate but **DO NOT** use fasteners to affix the amp to the plate or FM reception will be reduced!



Fig 1.1

Step #4: Locate the main power harness and plug it into the matching “pig-tail” on the side of the amp. Locate the supplied input harness and plug into the “audio input” socket on the side of the amp. Locate the harness with brown/black and blue/black wires and plug it into the 4 pin BLACK plug on the pig-tail coming out of the amp. Bring the amplifier with wire harnesses attached to the bike and slide the amp in under the radio so the bolt holes on the RGRM2CH mounting plate line up with the threads where the headlight assembly bolts to the bike. You will see the amp can really only go in one way. Once the amp is in place, use the factory headlamp assembly bolts to temporarily hold the amp in place.

Step #5: Its now time to wire the amp into your bike as per the REV 200-RM amplifier manual.

Step #6: Once the amp is wired, and you are ready to install the headlamp assembly back in, the RGRM2CH plate gets “sandwiched” between the headlamp assembly and the threaded flanges on the bike.

IMPORTANT: As stated in the REV 200-RM Manual, make sure to turn your front wheel to each extreme side making sure no amplifier wiring is impeding the steering of the bike!

